


Manual

## Luftschneider Assembly Instructions

**Congratulations on purchasing a Luftschneider. Assembling it properly is important to experience the full potential of this product, and, more importantly, for a safe ride. Failing to do so might result in serious injuries or even death. Therefore, we strongly recommend having your Luftschneider assembled by a qualified bicycle mechanic.**

The Luftschneider is tested for road and gravel use and a maximum system weight of 120 kg. It is designed for bikes using Token's Cable Box headset.

### Installing the Luftschneider

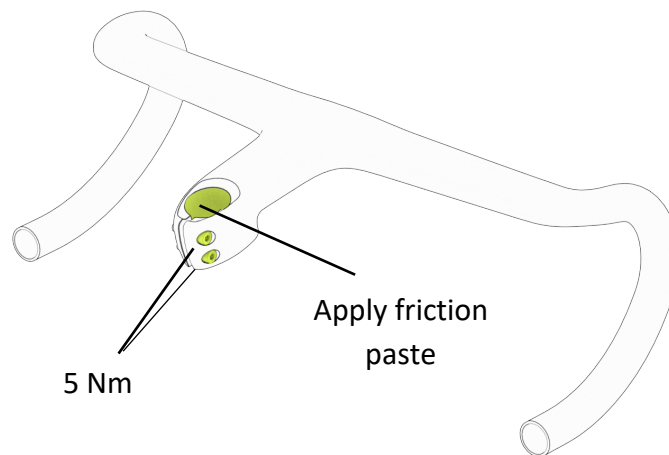


When installing the Luftschneider, apply friction paste on the contact surface between steerer and stem. Max torque for the clamping bolts is 5 Nm.

### GPS Mount


The GPS mount comes with inserts for Garmin or Wahoo head units. The Hammerhead Karoo can be mounted using their adaptor.

# Faserwerk

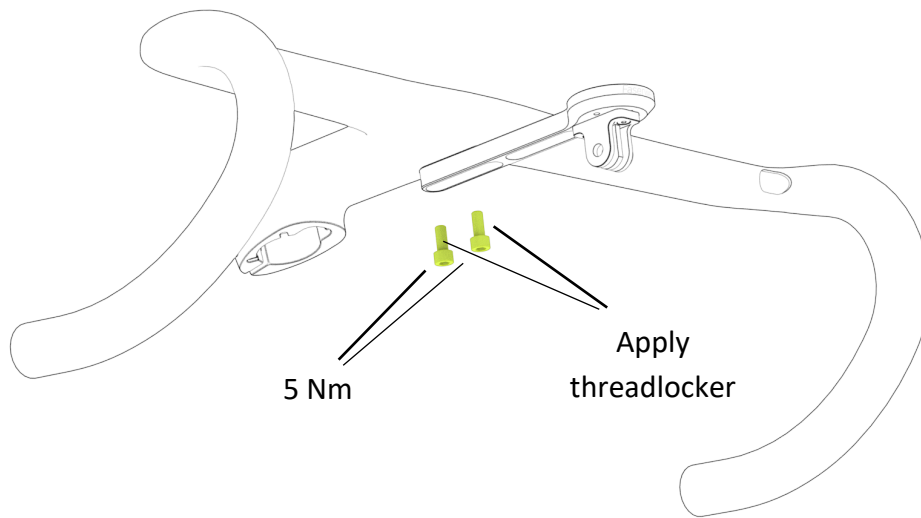

Apply threadlocker (e.g. Loctite 222) and tighten the two bolts to 5 Nm.


Top Spacer

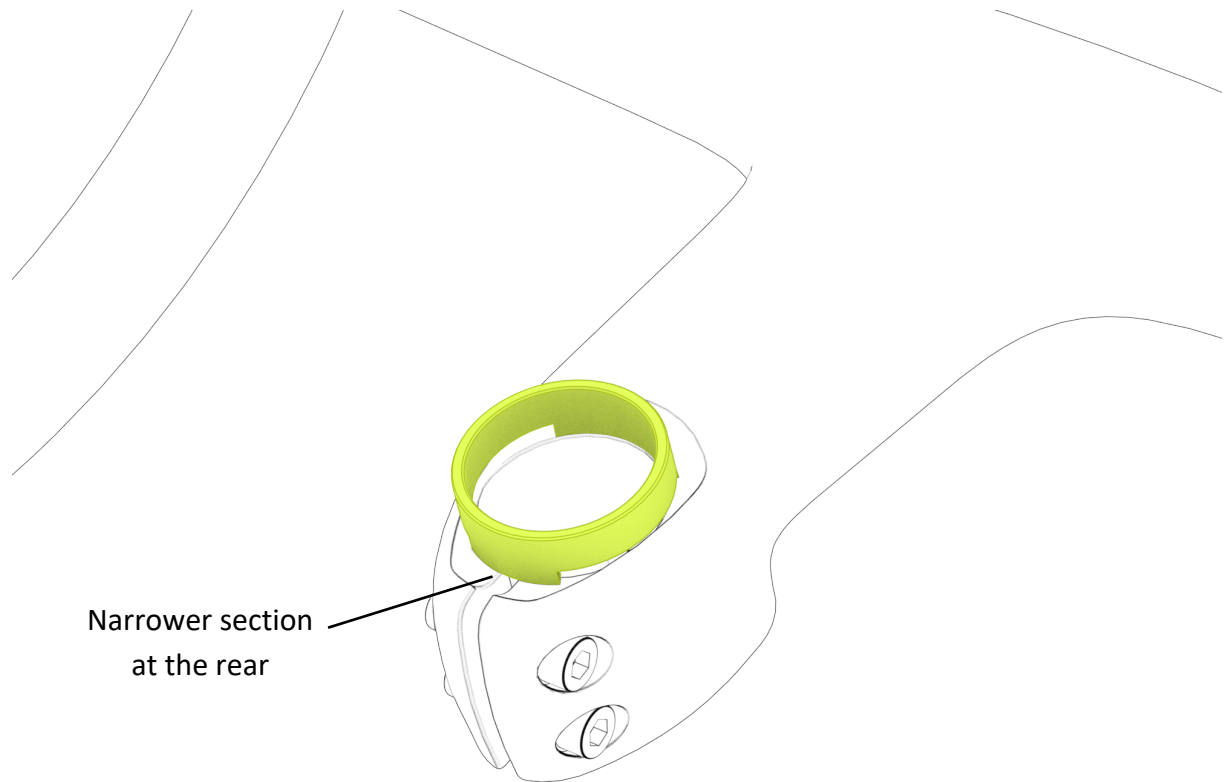

Narrower section  
at the rear

If you are unsure about your position and you want to leave your fork steerer uncut at first, use the top spacer as the first spacer on top of the stem. You can put additional regular spacers above it. The Top Spacer is not included as standard equipment and available through dealers or in our web shop.


## Cervelo Top Cone

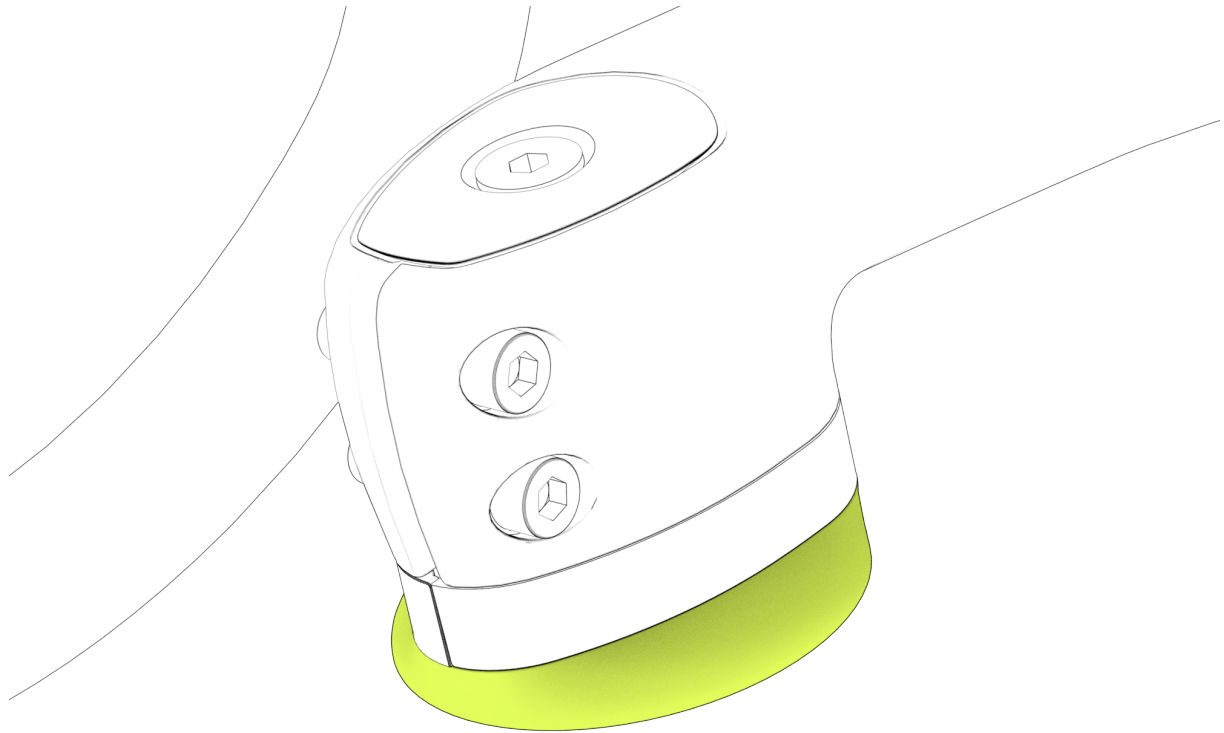

The Cervelo Top Cone replaces the regular topcone of your Cervelo that is equipped with a D-shaped steerer (e.g. Soloist, R5, Caledonia, Aspero) and makes it compatible with our Luftsneider handlebar and Token spacers. Just replace the Topcone, spacers, stem and handlebars and enjoy free speed. The Cervelo Top Cone is not included as standard equipment and available through dealers or in our web shop.


# Faserwerk

Cut here

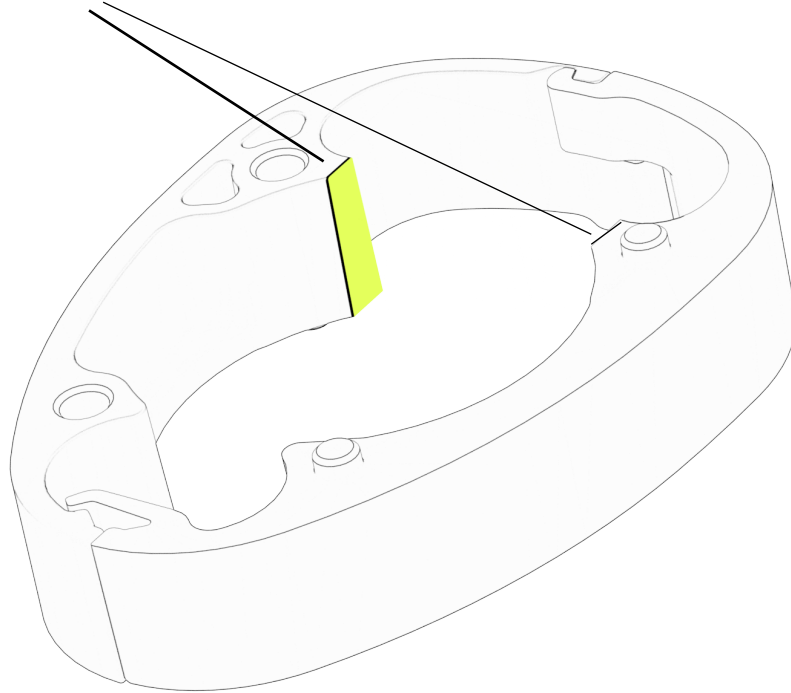

If you are using spacers, the first spacer above the top cone needs to be cut on the inside to create a pathway for the brake lines. One set of cut spacers is included with the top cone.

## Specialized Tarmac LS8 Top Cone

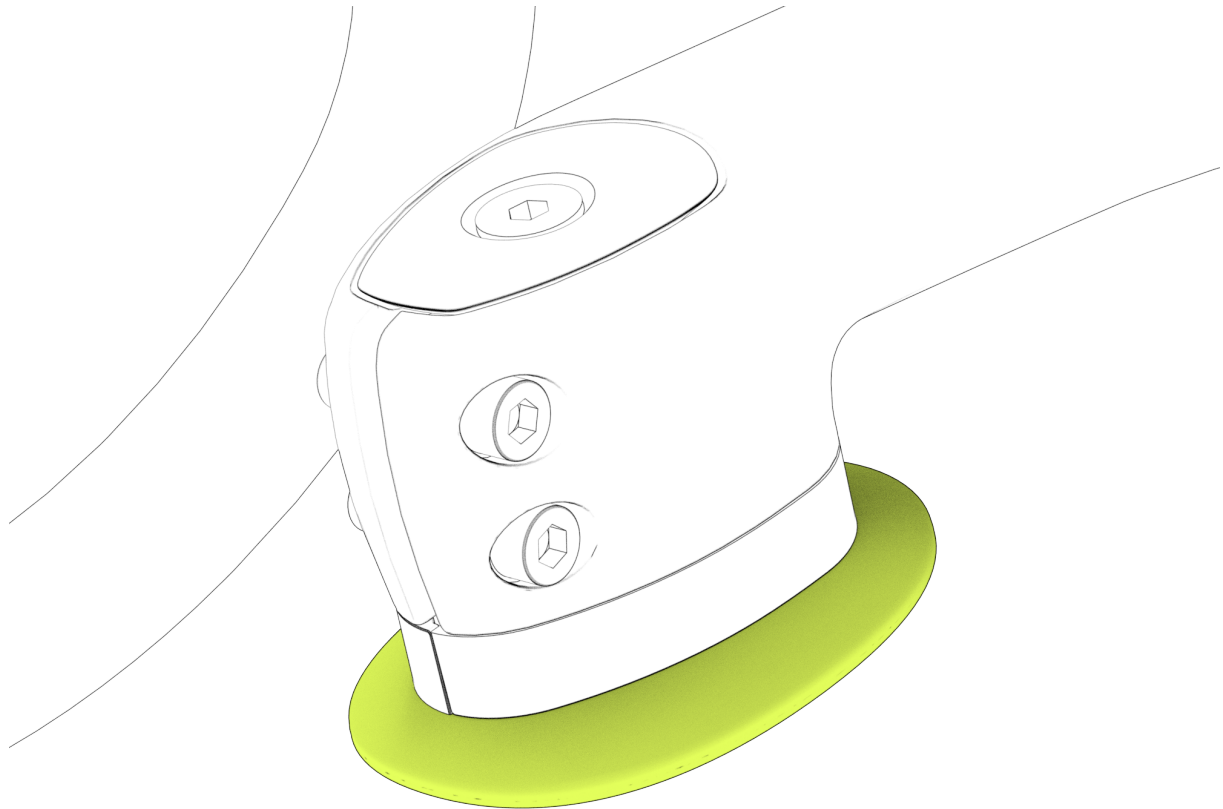

The Specialized Tarmac SL8 replaces the regular topcone of your Tarmac SL8) and makes it compatible with our Luftschneider handlebar and Token spacers. Just replace the Topcone, spacers, stem and handlebars. The Specialized Tarmac SL8 Top Cone is not included as standard equipment and available through dealers or in our web shop.