


Manual


Wuthocker Aero Assembly Instructions

Congratulations on purchasing a Wuthocker Aero. Assembling it properly is important to experience the full potential of this product, and, more importantly, for a safe ride. Failing to do so might result in serious injuries or even death. Therefore, we strongly recommend having your Wuthocker Aero assembled by a qualified bicycle mechanic.

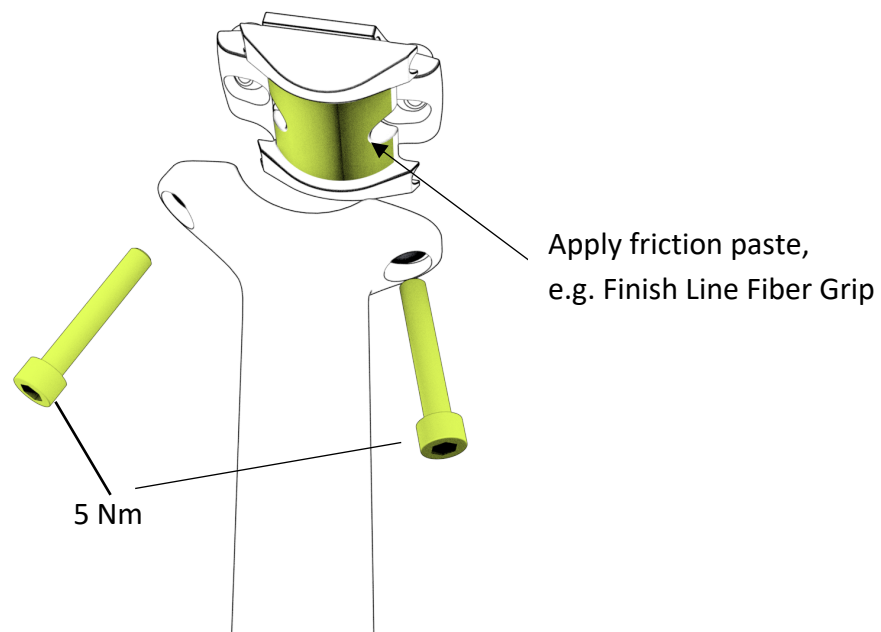

The two bolts clamping the saddle rails should be tightened evenly to 5 Nm. We recommend adding friction paste below the lower cradle. When installing the seatpost in the frame, friction paste must be applied.

Faserwerk

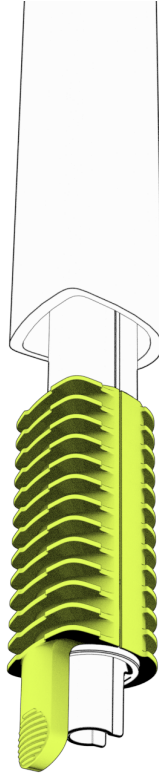

A special adaptor is available to hold a Shimano Di2 battery inside the Wuthocker Aero. Wrap the adaptor around the battery and push it into the end of the seatpost.

Weight Limit

This seatpost is designed and tested for a maximum total weight (rider plus bike plus equipment) of 110 kg.